


# VERSITRIM ELIMINAILER-T METAL ROOF RETROFITS


FLUTE FILL METAL ROOF VERSION

INSTALLATION INSTRUCTIONS

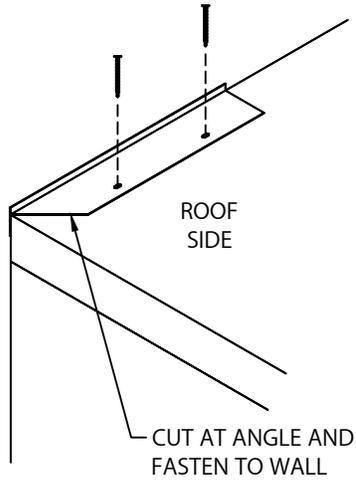


### 1. OUTSIDE MITER FABRICATION

CUT A PIECE OF ELIMINAILER T (ANY LENGTH) ON AN ANGLE. FASTEN TO WALL 6" O.C. AT CORNER WITH PROVIDED FASTENERS.

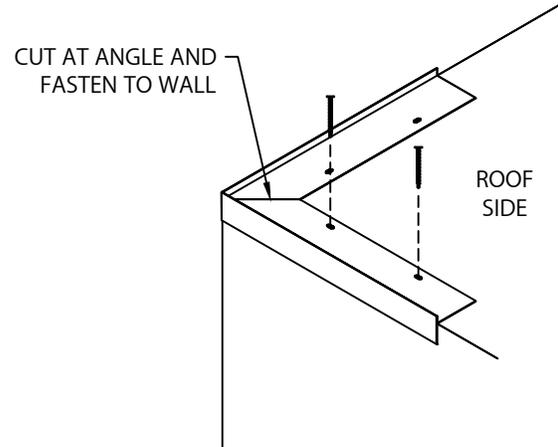

### 2. OUTSIDE MITER FABRICATION


CUT A SECOND PIECE OF ELIMINAILER T (ANY LENGTH) ON AN ANGLE TO FORM A COMPLETE MITER. FASTEN TO WALL AT CORNER WITH PROVIDED FASTENERS 6" O.C.

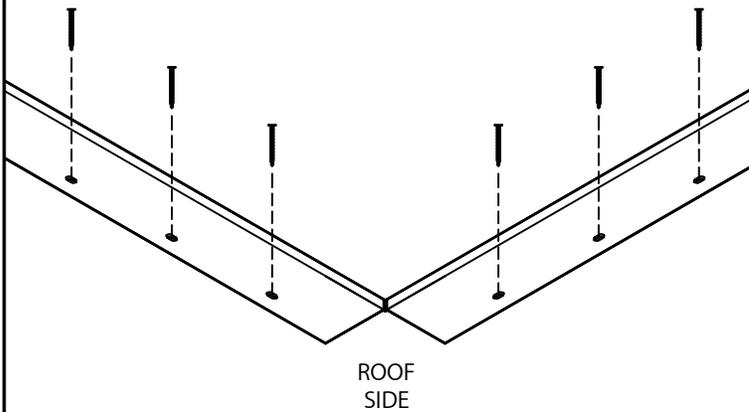

### 3. INSIDE MITERS

NO BAR CUTTING IS NEEDED FOR INSIDE MITERS. SIMPLY BUTT FULL SIZE BARS TIGHT INTO CORNER AND FASTEN TO WALL 6" O.C. WITH PROVIDED FASTENERS.

### TYPICAL INSTALLATION

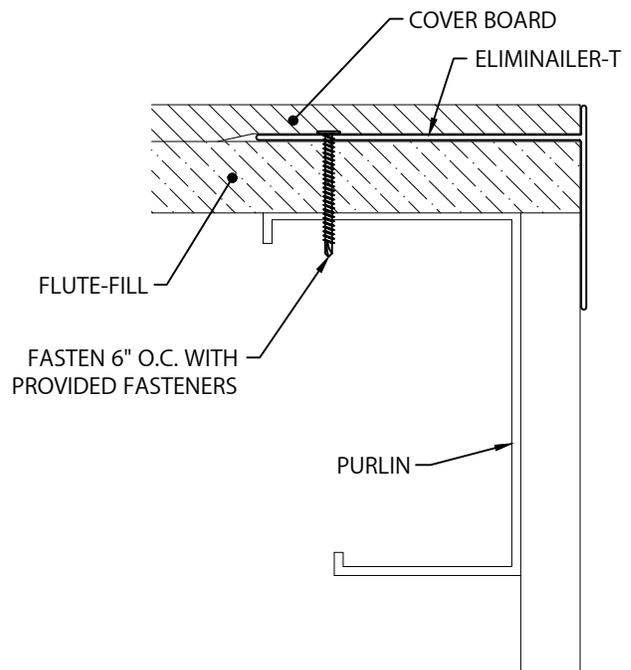

Customer Service  
800-558-2162

DATE: 04/08/22  
DRN BY: MLM  
CKD BY: MM


SHT.# 1 OF 2

DWG# 18118-29047

**B**

# VERSITRIM ELIMINAILER-T METAL ROOF RETROFITS

FLUTE FILL METAL ROOF VERSION

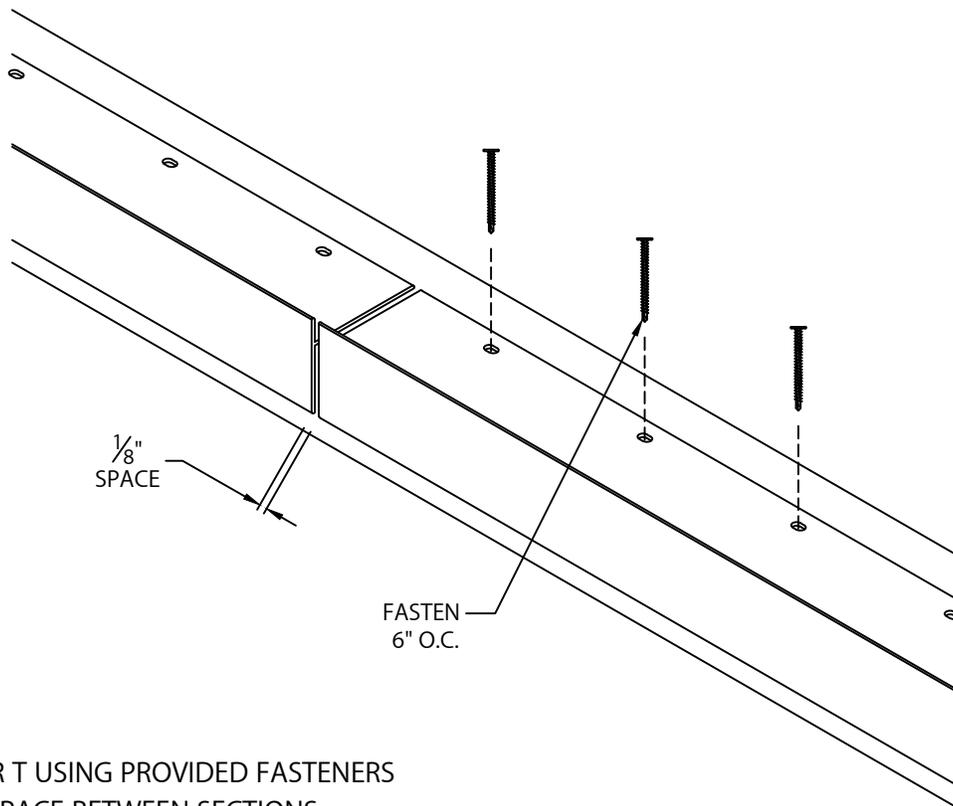

## 4. ELIMINAILER T

FASTEN ELIMINAILER T USING PROVIDED FASTENERS  
6" O.C. LEAVE A  $\frac{1}{8}$ " SPACE BETWEEN SECTIONS.