
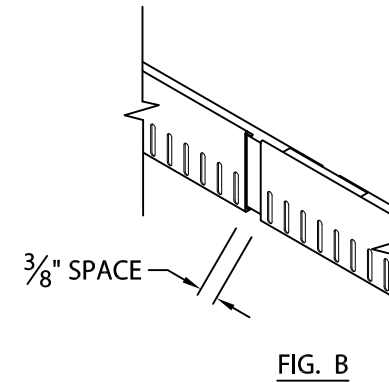



ECO-EDGE AND ECO-EDGE XL DRAIN BAR

INSTALLATION INSTRUCTIONS

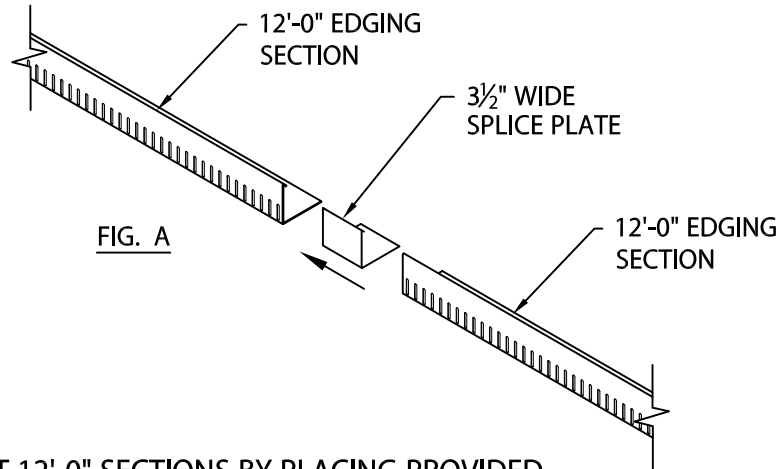

SPLICE PLATES

CONNECT ADJACENT 12'-0" SECTIONS BY PLACING PROVIDED 3 1/2" SPLICE PLATE AT EACH SECTION (FIG A). BE SURE TO LEAVE A 3/8" SPACE BETWEEN EACH DRAIN BAR (FIG. B).

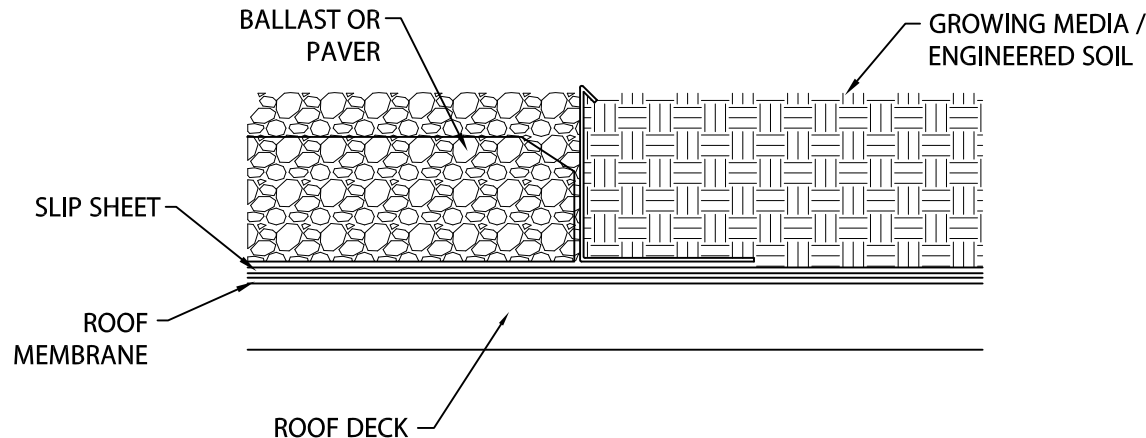

TYPICAL INSTALLATION

THE EDGING SEPARATES THE GROWING MEDIA FROM BALLAST OR PAVERS.