



# ELEVATE SINGLE CANTILEVER COPING


TAPERED VERSION - 3'-0" O.C.

INSTALLATION INSTRUCTIONS

**IMPORTANT:** Prior to installation, read instructions carefully.


**NOTE:** Position roof membrane on top of the wall covering the treated wood nailer(s) or substrate completely. Allow 1/2" minimum excess membrane beyond nailer where applicable. NRCA requirement. Membrane not shown for clarity.

**CAUTION:** INSTALL MITERS FIRST!

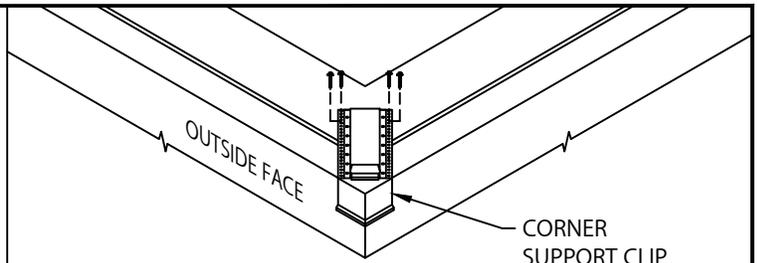


## STEP 1 - CORNER SUPPORT CLIPS

LOCATE AND FASTEN ONE GALVANIZED CORNER SUPPORT CLIP TO THE WALL AS SHOWN USING FOUR FASTENERS (PROVIDED).

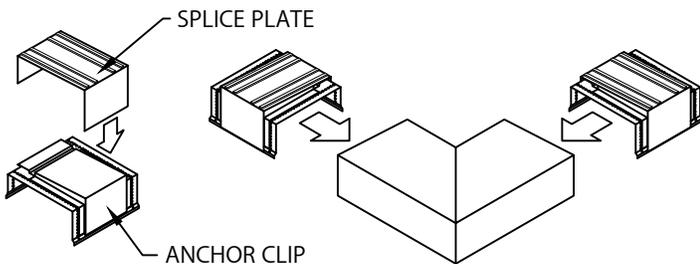


## STEP 2 - MITER SPLICE PLATES & ANCHOR CLIPS

POSITION THE SPLICE PLATE IN THE CENTER OF THE ANCHOR CLIP. INSTALL THE SPLICE PLATE AND ANCHOR CLIP ASSEMBLY INTO EACH END OF THE CORNER AS SHOWN

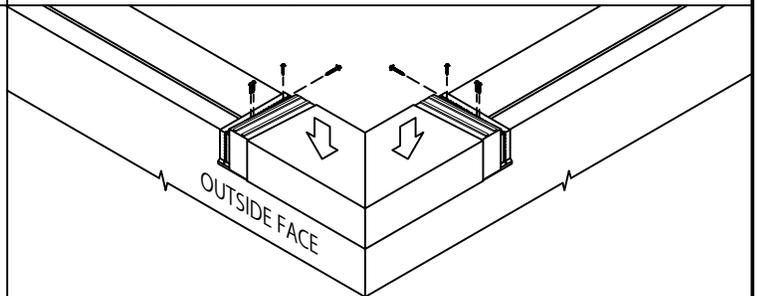


## STEP 3 - MITER

PLACE THE CORNER ASSEMBLY INTO POSITION, AND SECURE AT THE EXPOSED EDGE OF THE ANCHOR CLIPS AS PER DETAIL A.

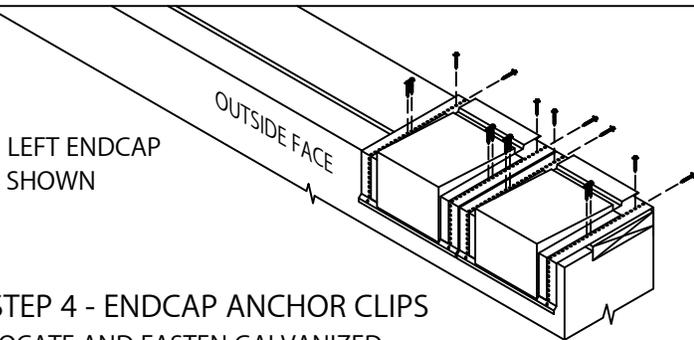


## STEP 4 - ENDCAP ANCHOR CLIPS

LOCATE AND FASTEN GALVANIZED ANCHOR CLIPS TO WALL WITH PROVIDED FASTENERS FOR SUBSTRATE (SEE DETAIL A).

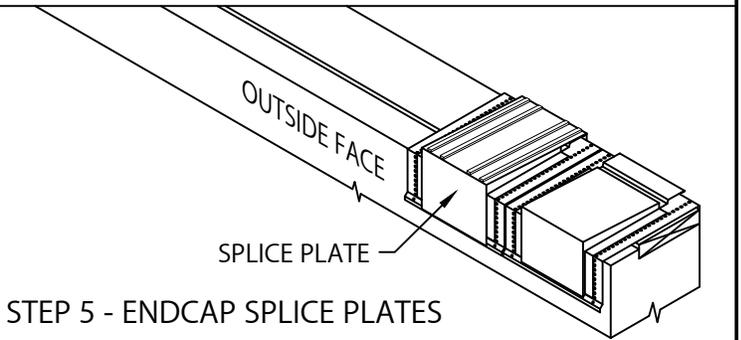

## STEP 5 - ENDCAP SPLICE PLATES


REMOVE RELEASE PAPER FROM TOP OF FACTORY APPLIED DUAL NON-CURING SEALANT STRIPS. PLACE SPLICE PLATE ONTO SECOND ANCHOR CLIP AS SHOWN.

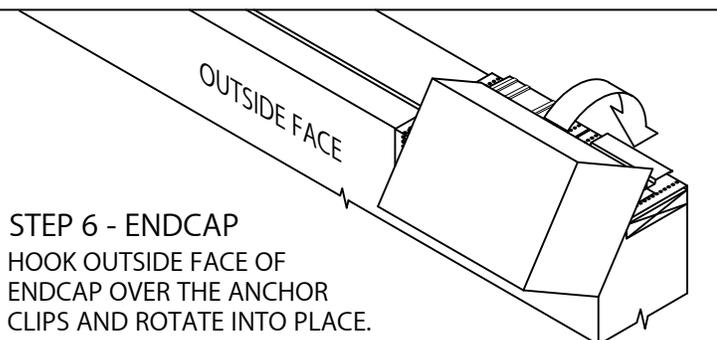

## STEP 6 - ENDCAP

HOOK OUTSIDE FACE OF ENDCAP OVER THE ANCHOR CLIPS AND ROTATE INTO PLACE. ENGAGE REAR LEG ONTO ANCHOR CLIPS BY PRESSING DOWNWARD UNTIL SNAP LOCK OCCURS.

## ANCHOR CLIP FASTENING-DETAIL A

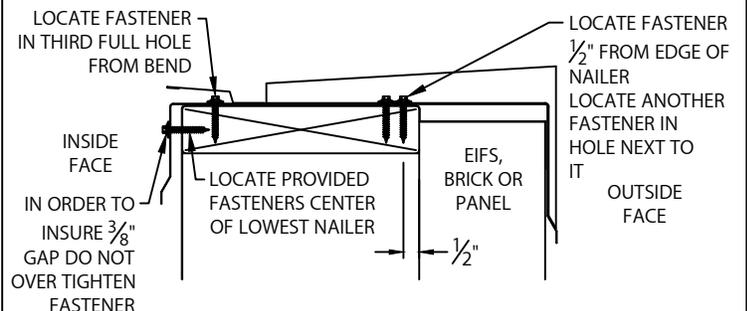

ELEVATE  
26 CENTURY BLVD.  
SUITE 205  
NASHVILLE, TN 37214

CONTACT YOUR LOCAL ELEVATE REPRESENTATIVE

DATE: 04/21/23

DRN BY: MLM

CKD BY: MM

SHT.# 1 OF 2

DWG# 13111-20450

E



# ELEVATE SINGLE CANTILEVER COPING

TAPERED VERSION - 3'-0" O.C.

INSTALLATION INSTRUCTIONS


**STEP 7 - ANCHOR CLIPS**  
 LOCATE AND FASTEN GALVANIZED ANCHOR CLIPS TO WALL AT 3'-0" CENTERS WITH PROVIDED FASTENERS FOR SUBSTRATE (SEE DETAIL A).

**STEP 8 - SPLICE PLATES**  
 PLACE SPLICE PLATE ONTO ANCHOR CLIPS AT SPLICE JOINTS, 12'-0" O.C.  
 NOTE: REMOVE RELEASE PAPER FROM FACTORY APPLIED DUAL NON-CURING SEALANT STRIPS.

**STEP 9 - COPING**  
 HOOK OUTSIDE FACE OF COPING OVER THE ANCHOR CLIPS AND ROTATE INTO PLACE. ENGAGE REAR LEG ONTO ANCHOR CLIPS BY PRESSING DOWNWARD UNTIL SNAP LOCK OCCURS.

**STEP 10 - COMPLETION**  
 CONTINUE INSTALLING COPING WITH A 3/8" SPACE AT SPLICE JOINTS TO ALLOW FOR THERMAL EXPANSION. FIELD CUT WHERE NECESSARY USING FINE TOOTH HACKSAW OR SNIPS.  
 NOTE: REMOVE PROTECTIVE FILM IMMEDIATELY.

## TYPICAL COPING INSTALLATION

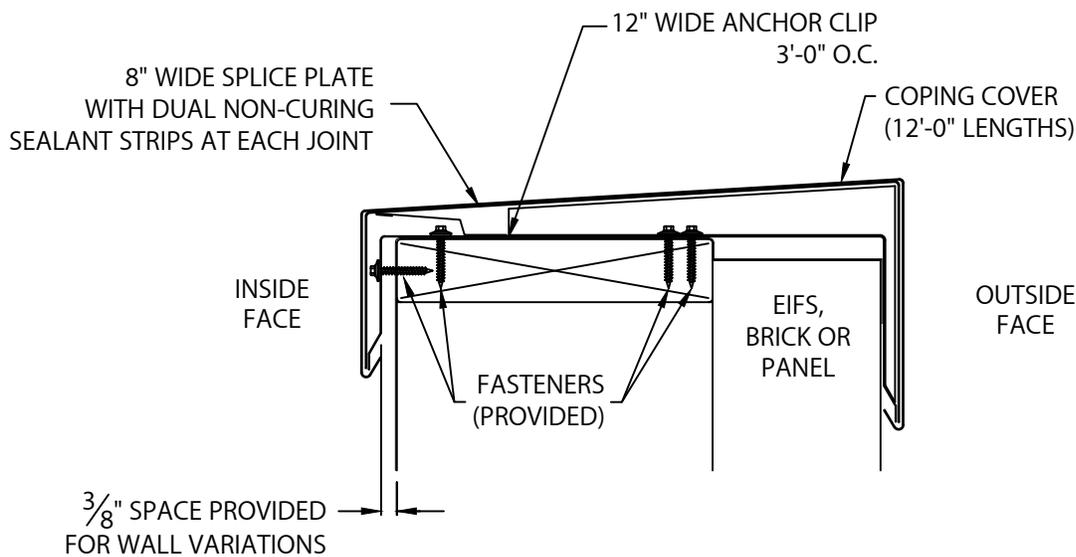

U.S. PATENT # 8,978,317 B1



ELEVATE  
 26 CENTURY BLVD.  
 SUITE 205  
 NASHVILLE, TN 37214  
 CONTACT YOUR LOCAL ELEVATE REPRESENTATIVE

DATE: 04/21/23  
 DRN BY: MLM  
 CKD BY: MM

SHT.# 2 OF 2  
 DWG# 13111-20450

E